




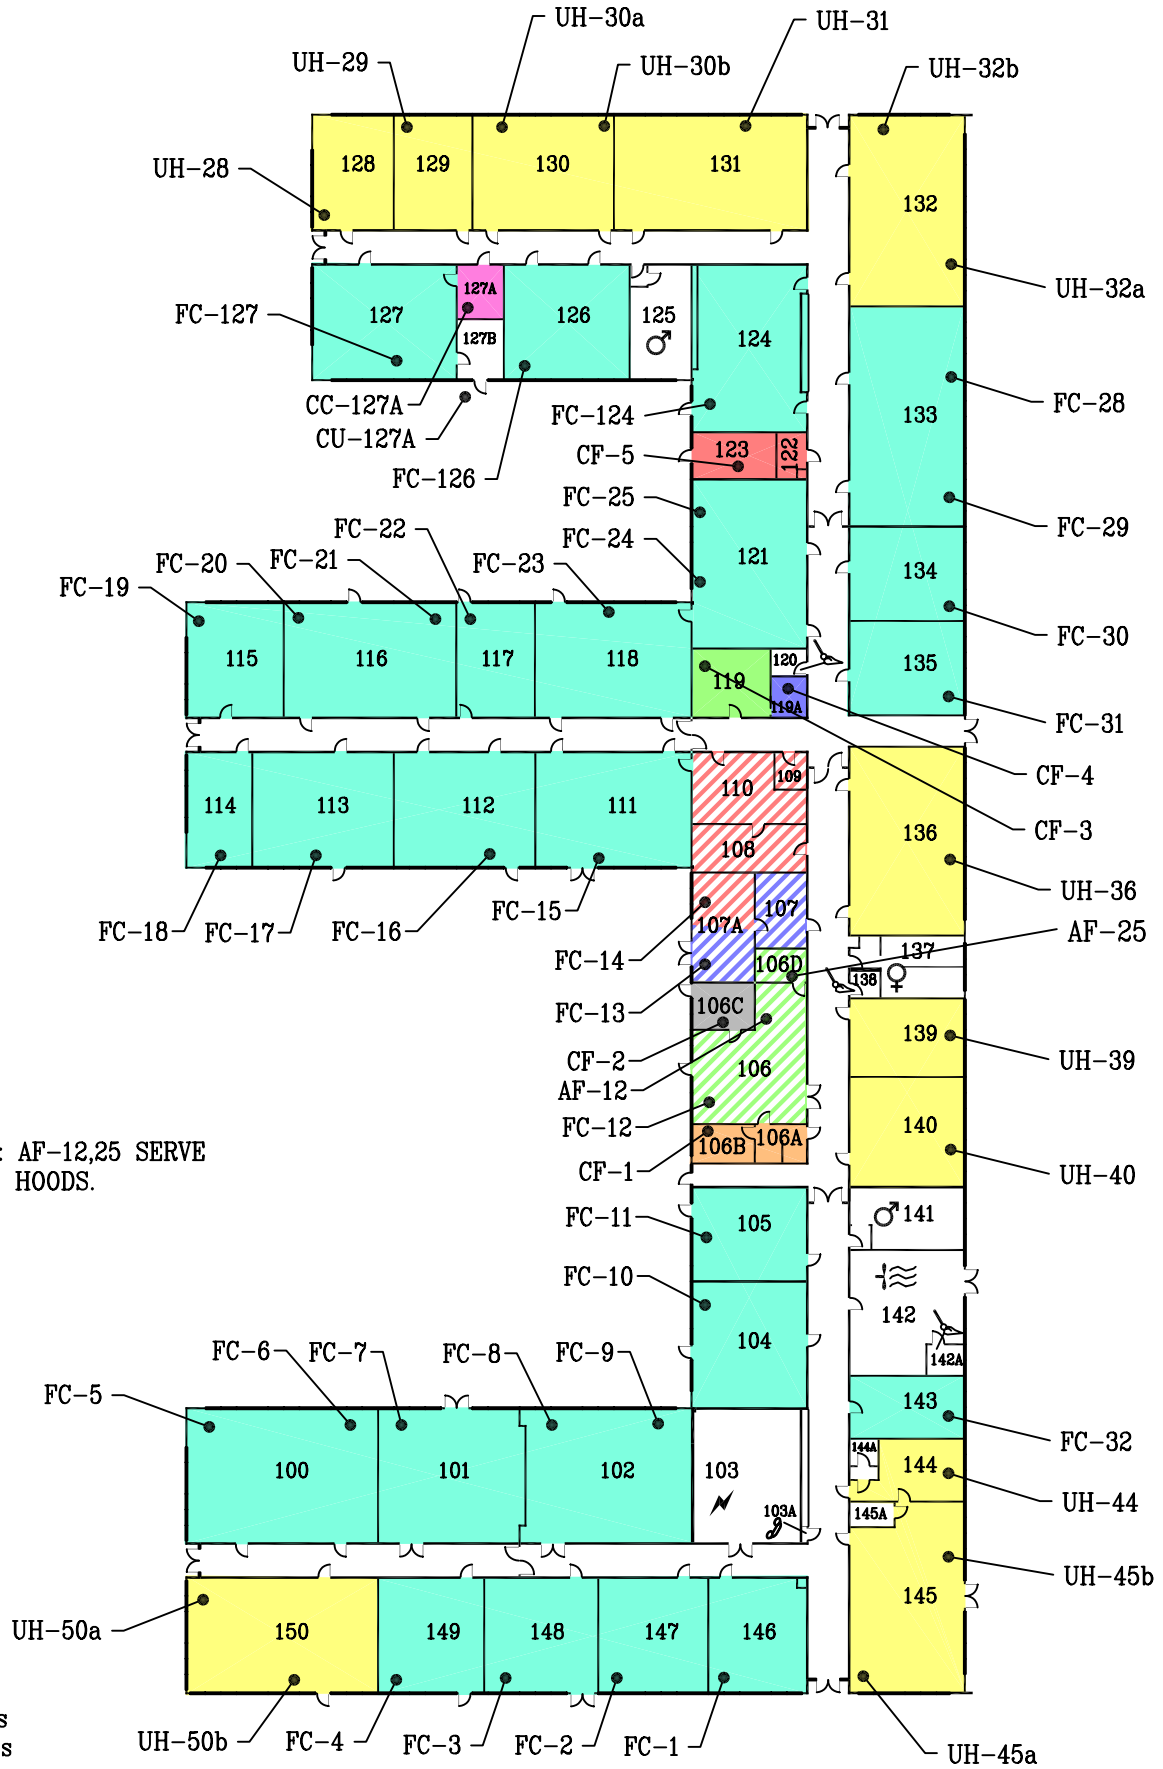

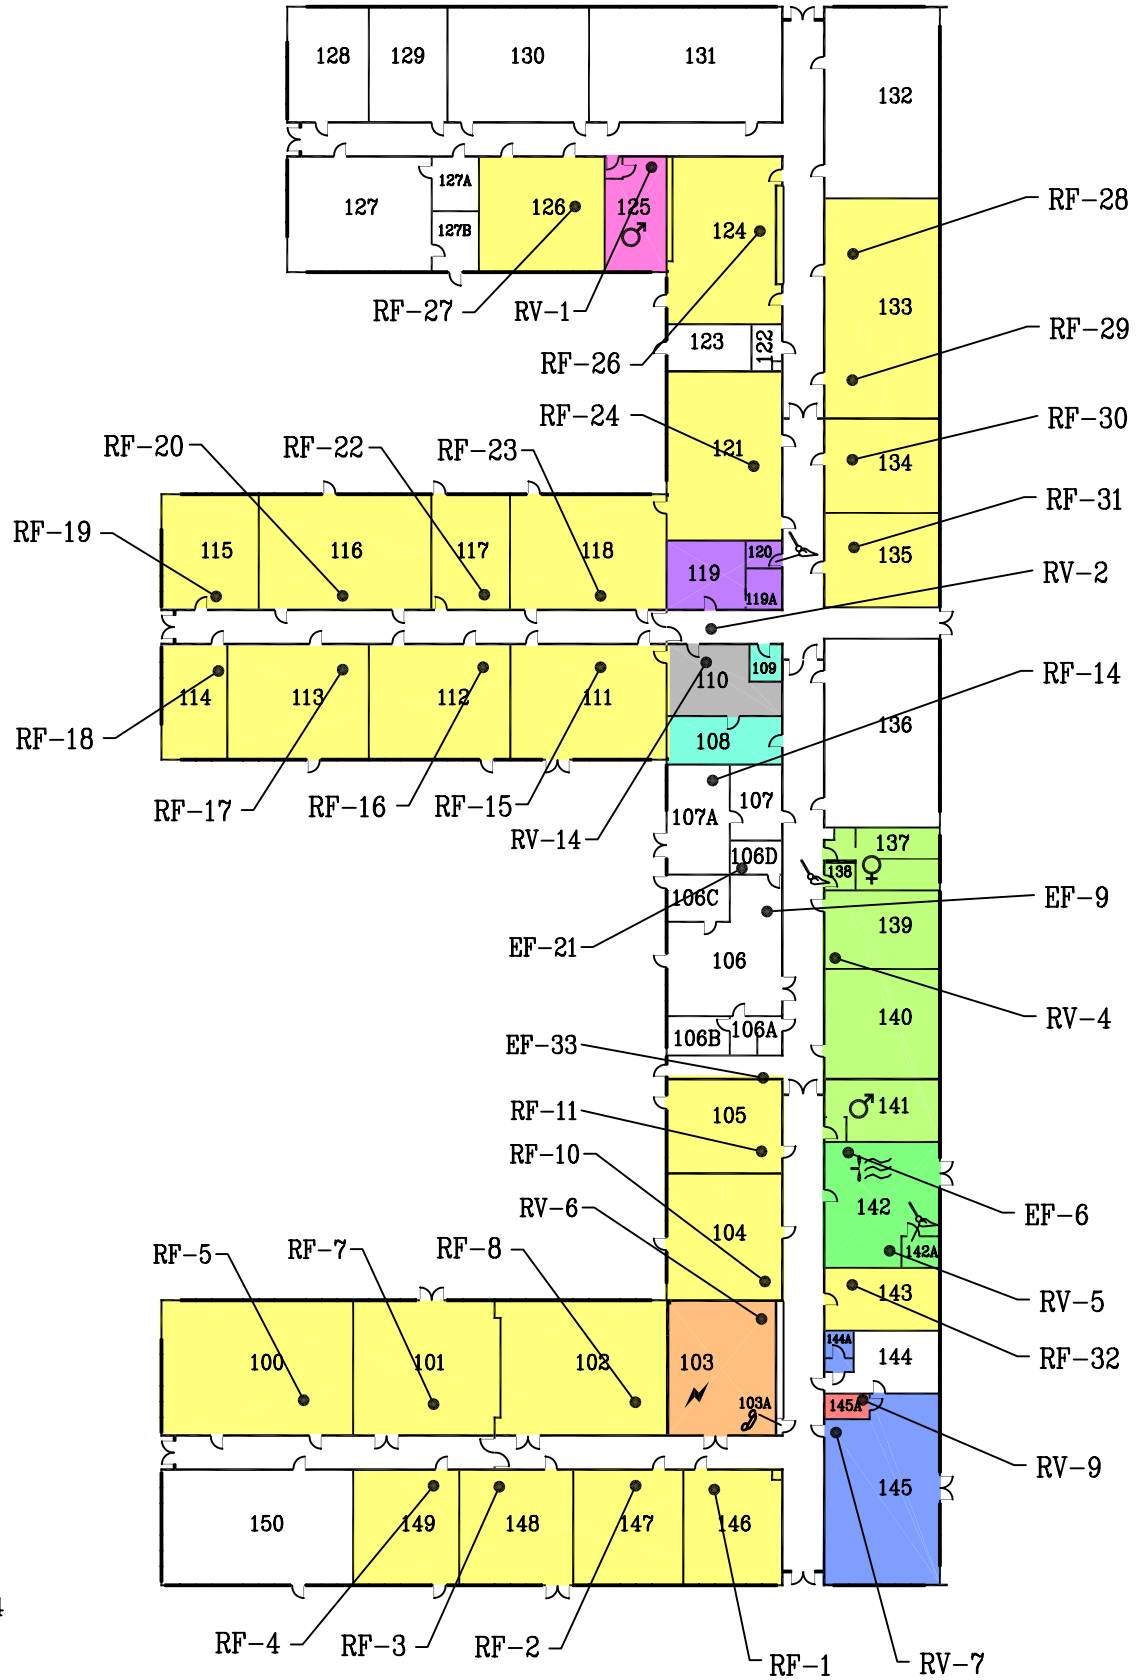


EXHAUST ZONES


- RV-1
- RV-2
- RV-4
- RV-5
- RV-6
- RV-7
- RV-9
- RF-14
- RV-14, RF-14
- LOCAL RF's

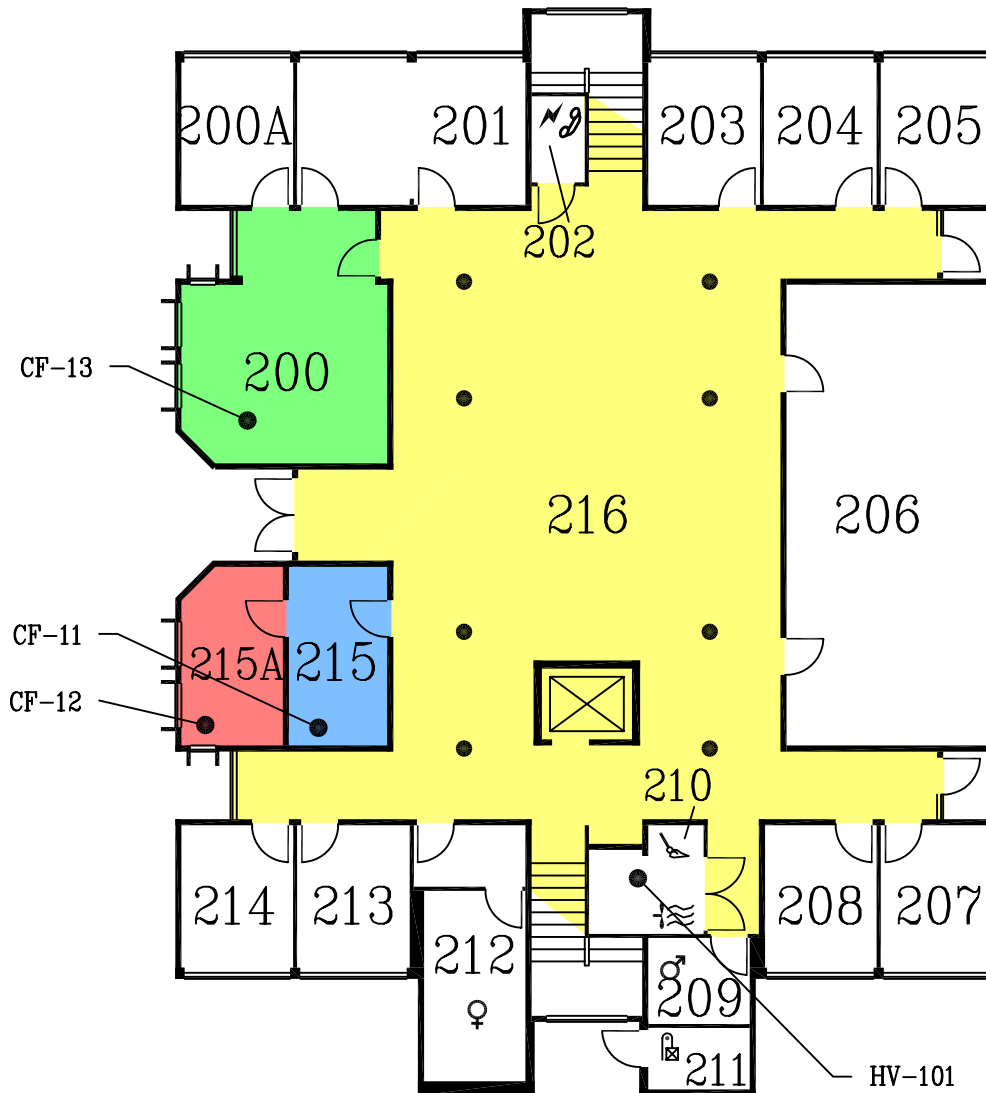

HEATING ZONES


- HV-101/RF-101
- CF-11
- CF-12
- CF-13

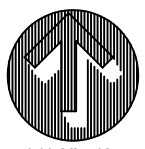


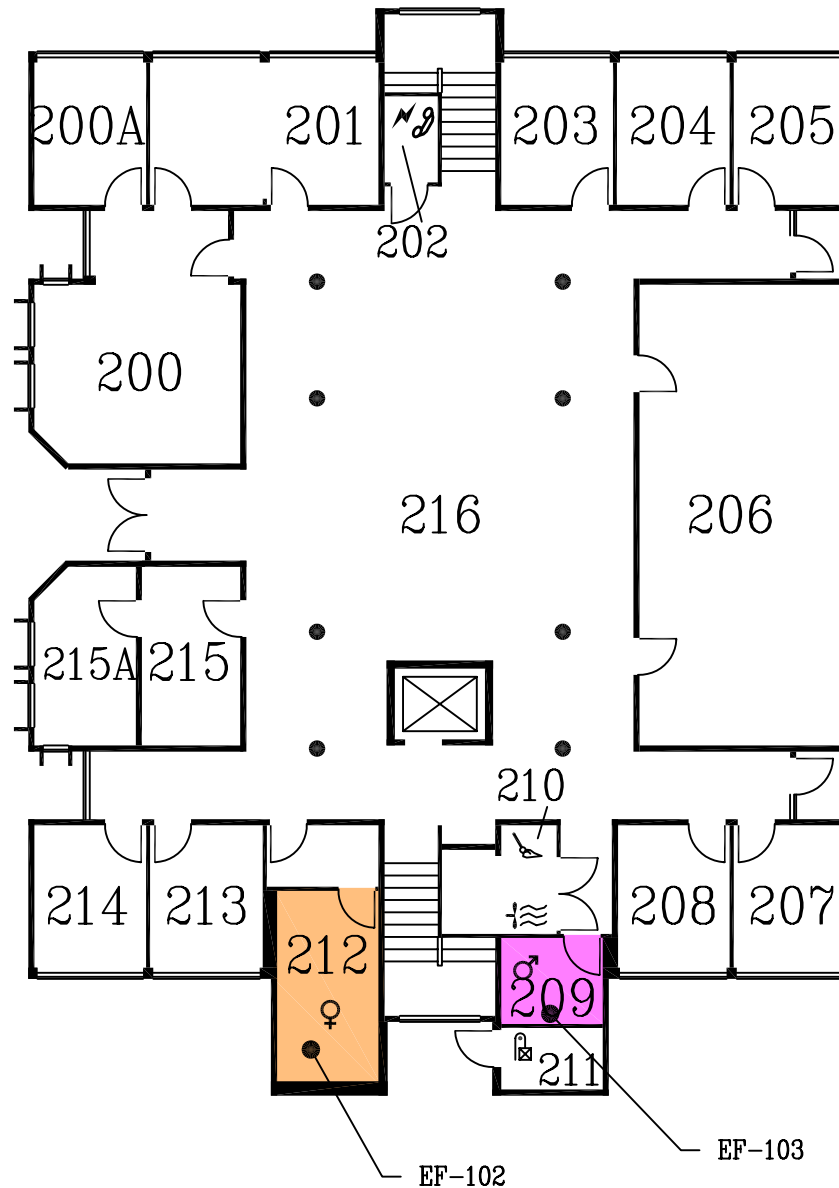

EXHAUST ZONES

- EF-102
- EF-103

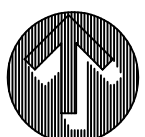

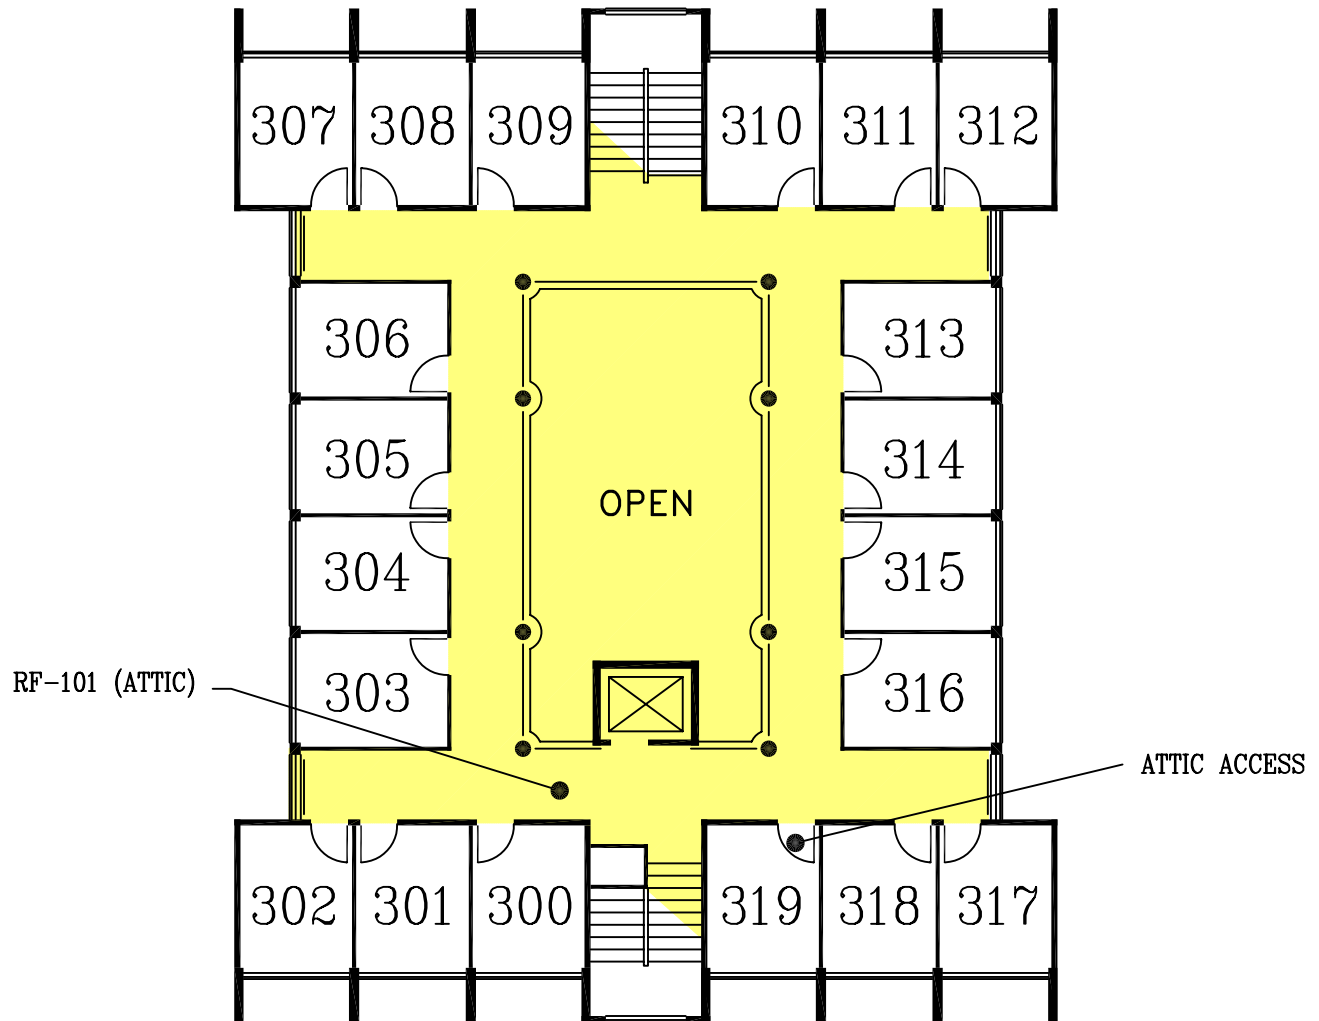

HEATING ZONE

HV-101